

## Chapter 6 Troubleshooting

This section describes alarms, other problems, their possible causes, and actions to take. Contact your distributor or ESPEC in the following cases.

- When the chamber does not operate properly even after taking the actions listed here
- When a malfunction occurs for which a "service call" is listed

### 6.1 Alarms and actions

 **WARNING**

**!** **When taking action on the primary side of the equipment's breaker, be sure to turn off the main power supply switch at your facility before de-energizing. Also, use caution not to apply voltage accidentally.**

Attempting to solve a problem with the power on can result in electric shock and creates a very dangerous situation.

**!** **Be sure to turn off the breaker before opening the electrical compartment door or the water circuit chamber door.**

This chamber has functions to sound a buzzer if a problem occurs, perform a self-diagnostic for major malfunctions, and display the malfunction details, cause, and action to take on the instrumentation screen. The details of the displayed problem are described in the alarm list. Take the appropriate action according to the details listed.


To troubleshoot problems that cannot be detected using the self-diagnostic, see "6.5 Troubleshooting." If the chamber does not operate properly even after taking the actions listed here, contact your distributor or ESPEC.

This chamber is equipped with a back trace function.

You can use the Online Diagnostics Service by sending back trace data to the request page of our Official Website. (Service available only to overseas customers)

\* The Online Diagnostics Service is to analyze the cause of failure and provide the customer with the diagnosis result for customers who send the internal data (back trace data) of the equipment before and after the occurrence of an alarm.

Flow of the back trace function

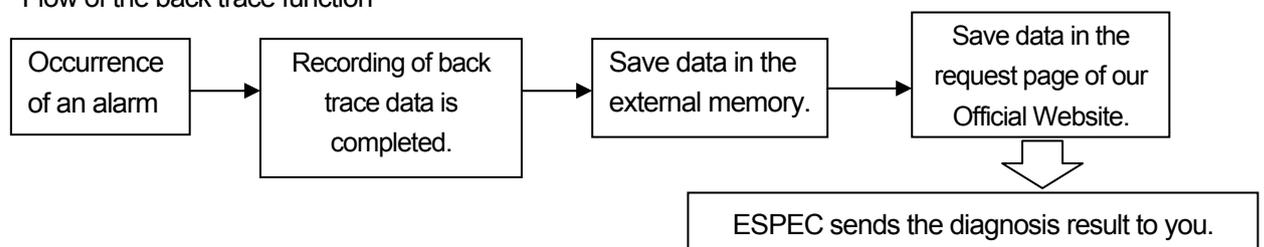

#### ◆ Reference ◆

The Online Diagnostics Service is available only to overseas customers. (Back trace data recording is possible.)

If you are a customer in Japan, use the ESPEC online support.\*

\* A separate contract is required.

If an alarm occurs, the alarm screen below appears automatically and a buzzer sounds. The chamber operation status continues to flash until the alarm is cleared.

Pressing the name of the alarm on the alarm screen displays the alarm details.


Check the alarm details, and then press [Stop Beep] to silence the alarm buzzer.

### Alarm screen



Pressing the name of an alarm displays the alarm help (details), as shown below.

### ALARM HELP screen

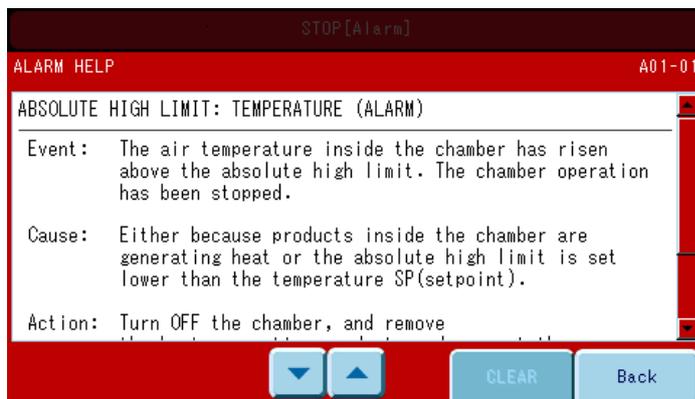

#### Notice

**Disabling the error buzzer sound or alarm buzzer prevents audible notification and may delay discovery of the error or alarm. Therefore, do not disable these sounds whenever possible.**

If the buzzer sounds are disabled, notification is only provided by the red flashing operation lamp and alarm screen display, so be careful.

#### ◆ Reference ◆

The operation of the alarm and error buzzers can be set using the maintenance settings and sound settings on the management setting screen.

## Alarms and action to take

Take the following actions when an alarm occurs.

Alarms are divided between errors and alarms, and the action to take can vary.

Error: When the chamber or component devices malfunction resulting in an error status

Alarm: When there is no malfunction but operation may become affected, such as a maintenance announcement

### ◆ Reference ◆

- Even if an error occurs, backup operation may enable operation to continue. Operation continues during an alarm.
- For details about the alarms, see "6.4 List of alarms".

### (1) If an error occurs

#### <Procedure>

- 1) Press [Stop Beep] to stop the buzzer.
- 2) Refer to the operation manual or the alarm help screen to determine the required action and then perform the action accordingly.

### (2) If an alarm occurs

#### <Procedure>

- 1) Press [Stop Beep] to stop the buzzer.
- 2) Refer to the operation manual or the alarm help screen to determine the required action and then perform the action accordingly.
- 3) Press [Clear] on the alarm help screen.  
Although operation does not stop when an alarm occurs, the alarm cannot be cleared from the alarm screen until the clear operation is performed or the breaker is turned off.

## 6.2 Alarm history display

The history of alarms that occur can be displayed on the management settings screen.

The current alarm can be viewed on the alarm screen, but once the alarm is canceled, the alarm display disappears. To display a history of alarms that occurred, use the alarm history display below.

### <Procedure>

- 1) While the menu is displayed, display the Operation/Setup menu.  
Press [Chamber Setup].



- 2) On the Chamber Setup selection screen, press [Alarm Report].




- 3) The alarm history is displayed.

No.	Type	Alarm	Date
8			
7			
6	WAR	EMPTY WATER	14-05-28 18:01:35
5	WAR	EMPTY WATER	14-05-28 16:01:52

- Number : Displays the history number (1 to 100).  
 Type : Displays whether the event is an alarm or warning.  
 Alarm name : Displays the name of the alarm that occurred.

Pressing an alarm name displays the alarm help screen.

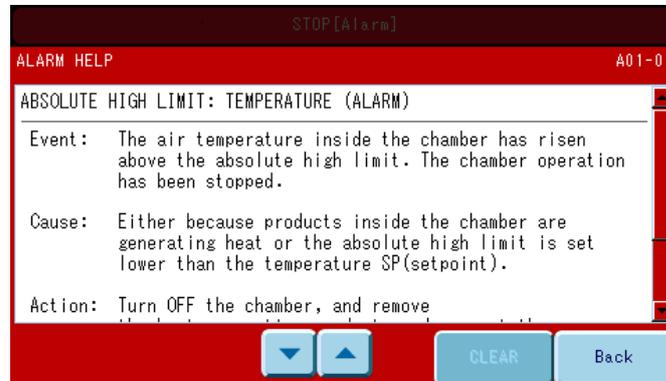

- Date : Displays the date and time the alarm occurred.



: Use these buttons to select a page.

- History number : Enter a number to jump directly to that alarm.

#### ◆ Reference ◆

- Up to four alarms are displayed on each page in order of occurrence, starting with the most recent one.
- The history stores up to 100 alarms. Occurrence of an alarm when there are already 100 alarms in history causes the oldest alarm in history to be deleted to make room for the new one.

### 6.3 Back trace function

This equipment automatically records back trace data during operation.

The back trace data contains the temperature/humidity set points, temperature/humidity process values, and control value information of the control items required to control the equipment. If an alarm occurs, the equipment automatically completes the recording of back trace data.

If you store the data in the request page of our Official Website, you can receive the Online Diagnostics Service.

#### <Procedure>

- 1) When an error occurs, the chamber automatically stops recording of the back trace data. When stopping of recording is complete, the following message appears.




#### ◆ Reference ◆


##### Resuming back trace recording

Even when data is not saved to the ESPEC Web site, if the back trace setting is set to on, recording of back trace data is resumed automatically.

- 2) Insert external memory (USB device) into the external memory port below the instrumentation panel and then press [Write Back Trace Data] on the Ext Memory tab.

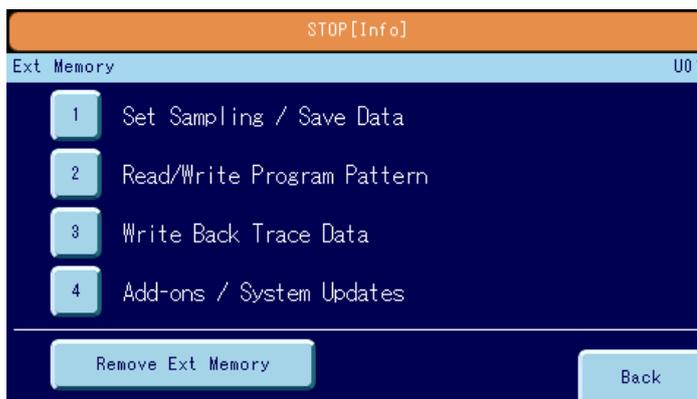


- 3) On the Write Back Trace Data screen, you can check the [Trigger Time] and [Trigger] details.  
Select the data you want to save.
- If more than one error occurred, the name of the first error detected by the chamber is displayed.

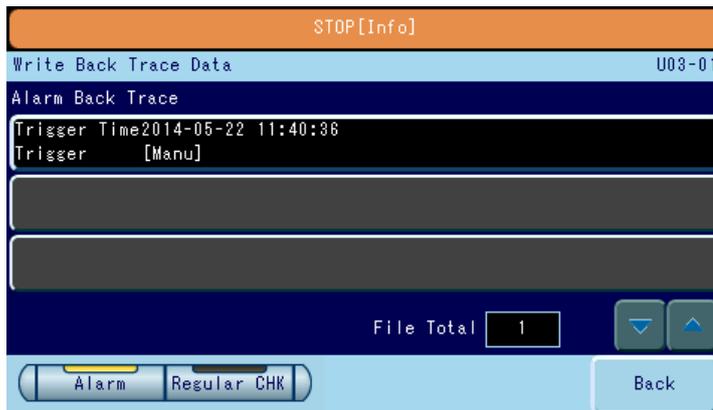

- 4) When writing to the external memory is complete, back trace is resumed.
- 5) Click [CLOSE]. On the External Memory screen, press [Remove Ext Memory]. Remove the external memory device after the message "Remove the memory" appears.

**Notice**

**Removing the external memory device without pressing [Remove Ext Memory] first may damage the recorded data saved to the external memory.**

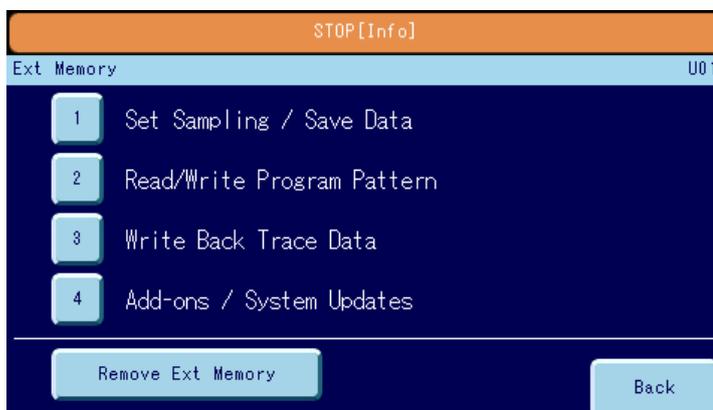


■ **Directory of external memory storage**

Three files are created in the directory that is automatically created in external memory.

(USB memory data viewed on a PC screen)



Folder configuration:

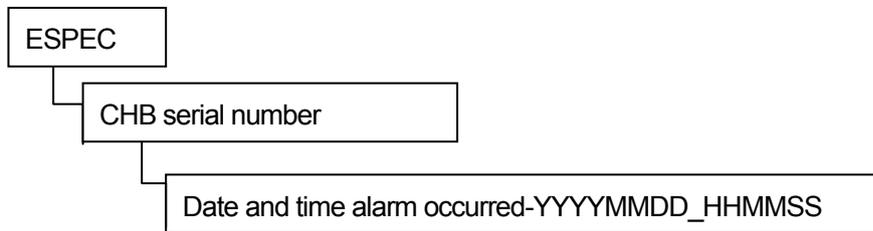

■ **Created files**

Unzipping the ZIP file creates the following files.

Back trace data: date and time alarm occurred-YYYYMMDD\_HHMMSS\_t.btd

Chamber Setup and Service information:

date and time alarm occurred-YYYYMMDD\_HHMMSS\_c.bts

Operation Setup information (Constant and Program Setup):

date and time alarm occurred-YYYYMMDD\_HHMMSS\_p.bts

The numeric part of the file name indicates the date and time.

■ **Using the Online Diagnostics Service**

Store the files stored in the external memory in the request page of our Official Website.

ESPEC will send the diagnosis result to you.

◆ **Reference** ◆

All constant operation and program operation data set on the chamber is saved in the operation settings information.

If "operation settings information" is not submitted to ESPEC, please send the back trace data (date and time alarm occurred-YYYYMMDDHHMMSS\_t.btd) and the management settings and manufacture maintenance information (date and time alarm occurred-YYYYMMDD\_HHMMSS\_c.bts).

Or set Mode Set File Set Out of Set Back Trace in Chamber Setup to off. Operation settings information will not be output.

## 6.4 List of alarms

Alarm detected by the chamber is categorized as "Warning" and "Error".

If the [Clear] button is displayed on the help screen of an alarm categorized as a "Warning", the alarm indication can be cleared after taking action.

If an alarm occurs again even after taking action, contact a service representative.

Com: Indicates the network alarm number.

OP: Indicates an alarm when using optional equipment.

If a chamber has an option installed, there may be alarms related to the option that are included in the table below.

Refer to the applicable option manuals for more information.

Alarm name	Com	OP	Category		Problem	Probable cause	Action
			Warning	Alarm			
SYSTEM ERROR	31			○	Instrumentation system error (Detected even when chamber is stopped.)	Internal system error	<ul style="list-style-type: none"> <li>Turn off the primary side power breaker and then restart operation.</li> <li>If error recurs, provide system error number to service personnel.</li> </ul>
SYSTEM ERROR	31		○		A minor system error has occurred (chamber operation continues).	Internal system error	<ul style="list-style-type: none"> <li>Check settings.</li> <li>If error recurs, provide system error number to service personnel.</li> </ul>
DISPLAY UNIT FAULTY CONNECTION	-			○	Display is blank or screen contents are abnormal. Chamber operation stops.	<ul style="list-style-type: none"> <li>Internal circuitry error (communication error when turned on)</li> <li>Communication error after primary side power breaker is turned off and then back on</li> </ul>	<ul style="list-style-type: none"> <li>Turn primary side power breaker off and then back on.</li> </ul>
RECORDING MEDIA RECOGNITION WARNING	-		○		<p>The following functions are not performed because the recording media cannot be recognized. You can operate the chamber.</p> <ul style="list-style-type: none"> <li>Sampling data save to internal memory</li> <li>Record back trace data</li> <li>Write back trace data to external memory</li> <li>Download back trace data (web)</li> <li>Add-ons/system update</li> </ul>	The recording media may have failed.	<ul style="list-style-type: none"> <li>Turn primary side power breaker off and then back on.</li> <li>If the error recurs, contact a service representative.</li> </ul>
RECORDED DATA DELETION WARNING	-		○		<p>A portion of the following recorded data has been deleted. You can operate the chamber.</p> <ul style="list-style-type: none"> <li>Sampling data</li> <li>Back trace data</li> <li>Add-ons/system updates history</li> </ul>	The recording area for the recorded data has been corrupted, so a portion of the recorded data has been deleted.	<ul style="list-style-type: none"> <li>If the error recurs, contact a service representative.</li> </ul>

Alarm name	Com	OP	Category		Problem	Probable cause	Action
			Warning	Alarm			
RECORDED DATA INITIALIZATION WARNING	-		○		The following recorded data has been lost due to initialization. You can operate the chamber. <ul style="list-style-type: none"> <li>Sampling data</li> <li>Back trace data</li> <li>Add-ons/system updates history</li> </ul>	The recording area for the recorded data has been corrupted, so the recording area was initialized.	<ul style="list-style-type: none"> <li>If the error recurs, contact a service representative.</li> </ul>
INDEPENDENT OVERHEATING ERROR /THERMAL FUSE ERROR	12			○	The test area temperature has exceeded the setting of the overheat protector or the set temperature fuse value, stopping operation of the chamber.	<ul style="list-style-type: none"> <li>Heat generated by sample</li> <li>Low overheat protector setting</li> <li>Heater error</li> </ul>	<ul style="list-style-type: none"> <li>Turn primary side power breaker off</li> <li>Eliminate the source of heat.</li> <li>Configure overheat protector settings correctly.</li> </ul>
HUMIDIFIER DRY HEAT ERROR	21			○	The humidifier dry heat prevention mechanism activated, stopping operation of the chamber.	<ul style="list-style-type: none"> <li>Heater supply water system error</li> <li>Low water level due to faulty heater water level adjustment</li> </ul>	<ul style="list-style-type: none"> <li>Check the water level of the chamber.</li> </ul>
REFRIG-1 COMPRESSOR ERROR	8			○	Chamber operation is stopped because of overcurrent by refrigerator-1 in the machinery compartment, activating the overload relay.	The ambient temperature is too high or the power supply voltage is too low.	<ul style="list-style-type: none"> <li>Stop operation and allow the refrigerator to cool for some time.</li> <li>Check the power supply voltage</li> </ul>
ABS HIGH LIMIT: TEMP	2			○	Chamber operation is stopped because the test area temperature is greater than the upper limit absolute value of the temperature alarm.	<ul style="list-style-type: none"> <li>Heat generated by sample</li> <li>Low upper limit alarm value setting</li> </ul>	<ul style="list-style-type: none"> <li>Turn primary side power breaker off</li> <li>Remove the source of heat from inside the test area.</li> <li>Configure a proper upper limit absolute value.</li> </ul>
ABS LOW LIMIT: TEMP	3			○	Chamber operation is stopped because the test area temperature is less than the lower limit absolute value of the temperature alarm.	<ul style="list-style-type: none"> <li>Over capacity of cooling within the test area</li> <li>Cooling source effect</li> <li>Lower limit alarm value setting is too high.</li> </ul>	<ul style="list-style-type: none"> <li>Turn primary side power breaker off</li> <li>Remove the cooling source from inside the test area.</li> <li>Specify a proper lower limit absolute setting value.</li> </ul>
UPPER DEV LIMIT: TEMP	1		○		The test area temperature has exceeded the upper limit deviation of the temperature alarm, stopping the heater and humidifier until a reset is performed.	<ul style="list-style-type: none"> <li>Heat generated by sample</li> <li>Low deviation alarm value setting</li> </ul>	<ul style="list-style-type: none"> <li>Remove the source of heat from inside the test area.</li> <li>Set the alarm value for deviation from the setting temperature 10°C higher.</li> <li>Auto recovery will be performed when a setting lower than the temperature in the test area is specified.</li> </ul>
ABS HIGH LIMIT: HUM	22			○	The test area humidity has exceeded the upper limit value of the humidity alarm, stopping the humidifier until a reset is performed.	<ul style="list-style-type: none"> <li>Momentary relative humidity rise</li> <li>Low upper limit absolute value</li> </ul>	<ul style="list-style-type: none"> <li>Configure a proper upper limit absolute value.</li> <li>Auto recovery will be performed when test area internal humidity drops below the alarm value.</li> </ul>
ABS LOW LIMIT: HUM	23			○	The test area humidity is less than the humidity alarm lower limit absolute value. Chamber operation continues.	<ul style="list-style-type: none"> <li>Momentary drop in relative humidity</li> <li>Lower limit alarm value setting is too high.</li> </ul>	<ul style="list-style-type: none"> <li>Check the lower limit alarm value setting.</li> </ul>

Alarm name	Com	OP	Category		Problem	Probable cause	Action
			Warning	Alarm			
HUM. WATER SUPPLY WARNING	26		○		Humidity operation is stopped because the humidifying tray water level does not become full even after the water pump performs a water supply operation of 10 minutes or longer to the humidifying tray.	<ul style="list-style-type: none"> <li>Humidifier supply water system error</li> <li>Drop in supply water pressure</li> </ul>	<ul style="list-style-type: none"> <li>Check the water circuit for leaks.</li> <li>Check the humidifier supply water system and then restart operation.</li> </ul>
WATER TANK EMPTY	26		○		The water tank is empty. Though the humidity operation will continue using the water in the humidifying tray, humidity operation will stop if operation continues without replenishment.	<ul style="list-style-type: none"> <li>Water tank is empty.</li> </ul>	<ul style="list-style-type: none"> <li>Replenish water tank water.</li> <li>Auto recovery will be performed after water is replenished.</li> </ul>
AIR CIRCULATOR FAILURE	12			○	The area surrounding the air circulator motor became abnormally hot, activating the temperature switch built in to the air circulator and stopping operation of the chamber.	<ul style="list-style-type: none"> <li>Overload operation of air circulator motor</li> </ul>	<ul style="list-style-type: none"> <li>Stop operation for a while and allow the air circulator motor to cool down.</li> </ul>
SENSOR BURN-OUT: TEMP CONTROLLER (Pt1)	0			○	Chamber is stopped because of detection of disconnection of the sensor input on the temperature control unit.	<ul style="list-style-type: none"> <li>Loose temperature control unit terminal</li> <li>Sensor disconnection</li> </ul>	<ul style="list-style-type: none"> <li>Turn off the primary side power breaker and then restart operation.</li> </ul>
SENSOR BURN-OUT: TEMP CONTROLLER (DC)	0			○	Chamber is stopped because of disconnection of control temperature sensor input on the temperature control unit.	<ul style="list-style-type: none"> <li>Loose temperature control unit terminal</li> <li>Temperature detect terminal disconnection</li> </ul>	<ul style="list-style-type: none"> <li>Turn off the primary side power breaker and then restart operation.</li> </ul>